



Installing The New Shutter Door Pin On The 8' Dome Shutter Doors

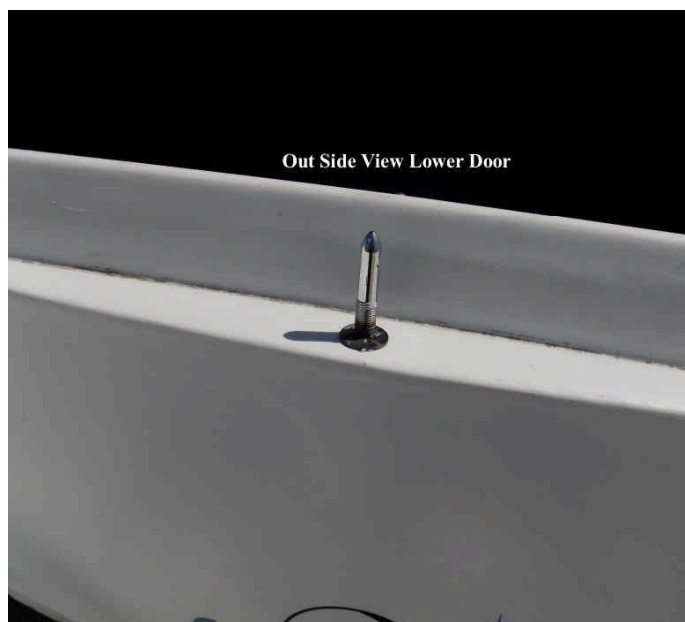

Start by finding the center of the width of the Door. Then measure down about 1" & drill a 7/16" hole. Install the pin from the outside in and put the nut on inside of the door.

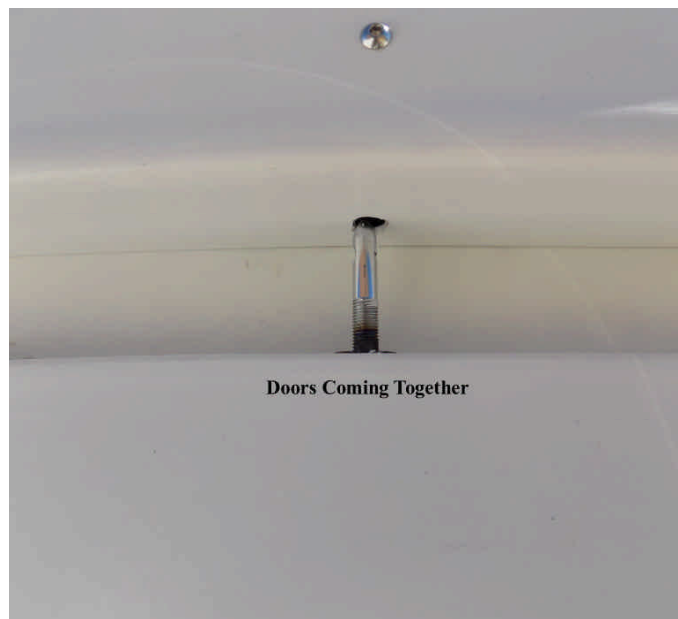

Now lower the upper door and mark where the pin touches the upper door.



Drill a 1/2" hole and slot it up & down slightly.



Close the upper door and adjust the hole if need